

PRESSURE/TORQUE CONVERSION CHART

4HP

Pressure in PSI	<i>Pressure in BAR</i>	FT. LBS.	<i>Nm</i>
1000	69	439	595
1200	83	530	719
1400	97	617	837
1600	110	707	959
1800	124	796	1079
2000	138	882	1196
2200	152	976	1323
2400	165	1055	1430
2600	179	1150	1559
2800	193	1240	1681
3000	207	1332	1806
3200	221	1423	1929
3400	234	1513	2051
3600	248	1606	2177
3800	262	1694	2297
4000	276	1786	2421
4200	290	1880	2549
4400	303	1972	2674
4600	317	2060	2793
4800	331	2152	2918
5000	345	2243	3041
5200	359	2334	3164
5400	372	2425	3288
5600	386	2518	3414
5800	400	2607	3535
6000	414	2697	3657
6200	427	2790	3783
6400	441	2882	3907
6600	455	2972	4029
6800	469	3065	4156
7000	483	3154	4276
7200	496	3246	4401
7400	510	3337	4524
7600	524	3430	4650
7800	538	3521	4774
8000	552	3614	4900
8200	565	3703	5021
8400	579	3791	5140
8600	593	3880	5261
8800	607	3972	5385
9000	621	4067	5514
9200	634	4155	5633
9400	648	4253	5766
9600	662	4343	5888
9800	676	4429	6005
10000	689	4500	6101